

**ORDER / QUOTATION FORM**

Customer Name: .....

Project: .....

QUOTE

Customer Ref: .....

Date: .....

ORDER

ALWAYS USE A METAL MEASURING TAPE. ALL BLINDS/SCREENS ARE MADE ACCORDING TO THE INFORMATION AND MEASUREMENTS SUPPLIED. THE MANUFACTURER CANNOT BE HELD RESPONSIBLE FOR INCORRECT INFORMATION GIVEN BY A CUSTOMER

**PLEASE NOTE: THE NUMBERED COLUMNS IN THE TABLE CORRESPOND TO THE ILLUSTRATIONS OVERLEAF**

ITEM REF	SCREEN / BLIND TYPE [ 1 ]	SHAPE [ 2 ]	FIXING BRACKET TYPE [ 3 ]	ROLLER OPERATING MECHANISM [ 4 ]	WIDTH 'CW' or 'PW' [ 5 ]	BOTTOM RAIL WIDTH 'BR'	DROP 'RD'	INSIDE / OUT-SIDE RECESS	FILM OR FABRIC COLOUR [ 6 ]	CABLE SUPPORT Y / N [ 7 ]	SIDE GUIDE CHANNELS Y / N	REMARKS or REFERENCE	QTY

**TO ENSURE A PROMPT AND ACCURATE REPLY TO YOUR ENQUIRY, PLEASE COMPLETE ALL OF THE COLUMNS AND ADD ANY REMARKS WHICH MAY BE USEFUL THEN EMAIL IT TO [SALES@SOLASOLV.COM](mailto:SALES@SOLASOLV.COM)**

# INSTRUCTIONS


## [ 1 ] CHOOSE PRODUCT TYPE...

**SOLASAFE (SS)** FILM SUNSCREEN INSIDE AN ALUMINIUM CASSETTE  
**SOLAROLA (SR)** FILM SUNSCREEN WITHOUT AN ALUMINIUM CASSETTE

**CASSLITE (CL)** FABRIC ROLLER BLIND INSIDE AN ALUMINIUM CASSETTE  
**DIMMLITE (DL)** FABRIC ROLLER BLIND WITHOUT AN ALUMINIUM CASSETTE

**LITETITE (LT)** BLACKOUT BLIND INSIDE AN ALUMINIUM CASSETTE WITH INNER AND OUTER SIDE CHANNELS

## [ 3 ] CHOOSE BRACKET TYPE...

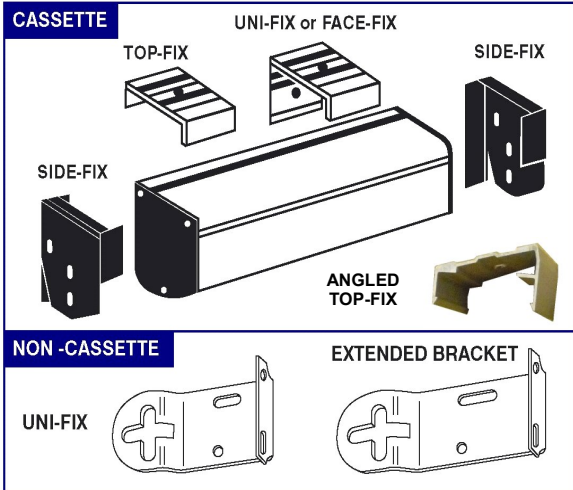

UNI-FIX BRACKETS ALLOW THE SCREEN / BLIND TO BE BOTH TOP FIXED AND FACE FIXED. IF UNSURE CHOOSE THESE BRACKETS.

FOR INVERTED INSTALLATIONS CHOOSE UNI-FIX


FOR INCLINED WINDOWS 15°+ FROM THE VERTICAL CHOOSE ANGLED TOP-FIX BRACKETS

### CODE


TF = TOP-FIX  
 ATF = ANGLED TOP-FIX  
 UF = UNI-FIX  
 SF = SIDE-FIX

## [ 2 ] CHOOSE SCREEN / BLIND SHAPE...

\*N.B. FOR UNEQUAL TAPERS THE LEFT HAND OFFSET (LHO) MUST BE SUPPLIED AS WELL AS THE BOTTOM RAIL (BR) WIDTH\*

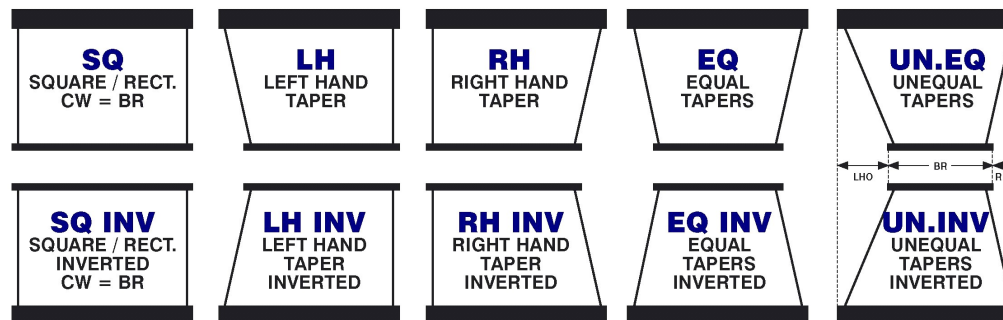

## [ 4 ] CHOOSE OPERATING SYSTEM...

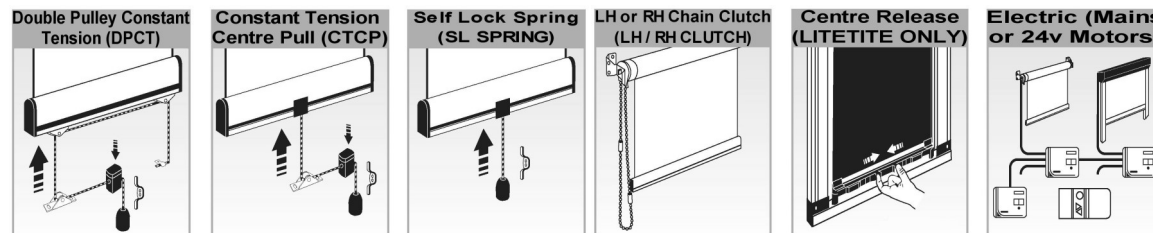

DPCT = CONSTANT TENSION SPRING WITH DOUBLE PULLEY BOTTOM RAIL

CTCP = CONSTANT TENSION SPRING WITH CENTRE PULL

LH CLUTCH = LEFT HAND CHAIN CLUTCH


ELECTRIC = MAINS POWER OR 24V MOTORS

SL SPRING = SELF LOCK SPRING

RH CLUTCH = RIGHT HAND CHAIN CLUTCH


BATTERY = BATTERY OPERATION WITH REMOTE

## [ 5 ] MEASURING INSTRUCTIONS...

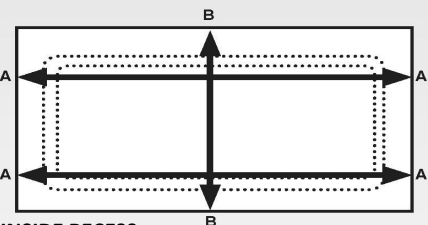


### INSIDE RECESS

Carefully measure width 'A' at two points to identify the recess and window shape e.g. square or tapered. Use the smallest size for 'A' and mark as INSIDE recess. Solar Solve will then deduct 6 mm from the width. This is the WIDTH dimension (also known as the CW=Cassette Width on the SOLASAFE screen or PW=Pin Width on the SOLAROLA screen). Carefully measure 'B' as the DROP dimension.

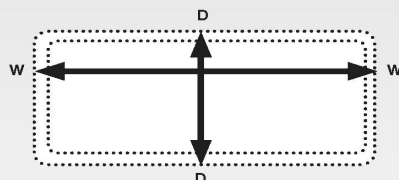

### OUTSIDE RECESS

Decide where the blind/screen is to be installed and carefully measure the width 'W' and drop 'D'. Give the width dimension 'W' as CW = Cassette Width or PW = Pin Width and the dimension 'D' as the drop RD = Required Drop.

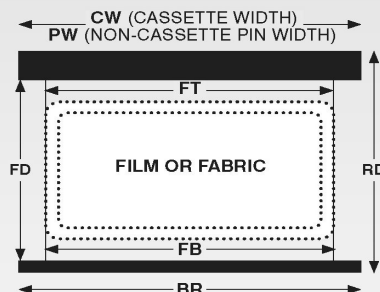

FT = Film / Fabric Top Width (CW or PW less 38mm)

FB = Film/Fabric Bottom Width (BR less 38mm)

FD = Film/Fabric Drop

BR = Bottom Rail Width

RD = Required Drop

## [ 6 ] CHOOSE FILM COLOUR

### SOLASOLV

### FILM COLOURS AVAILABLE

Name	INSide	OUTSide
GOLD	Grey	Gold
SILVER	Grey	Silver
GREY	Grey	Grey
BRONZE	Bronze	Bronze

## [ 7 ] OPTIONS...

